

GENERAC®  
**PWRcell2**  
HOME ENERGY STORAGE SYSTEM

# Mounting Guide: Battery Cabinet




## Tools & Fasteners Required




Tape Measure




Knockout Punch

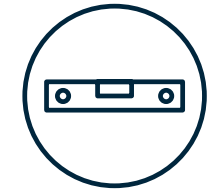


Level

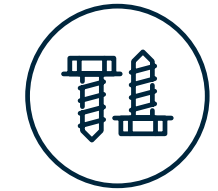

Flanged Fasteners

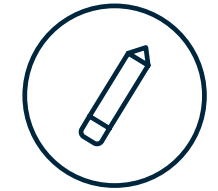

Pencil

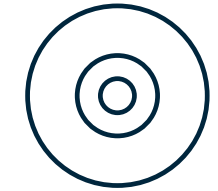

Washers



Drill



Hardware  
Kit  
Included

## Steps to Follow\*

**Step 1.**  
Survey Minimum Clearances and  
Determine Layout

**Step 2.**  
Establish Top Line

**Step 3.**  
Measure from Top Line to Top of  
Battery Cabinet Bracket

**Step 4.**  
Mark Holes, Pre-Drill and  
Fasten Bracket to Wall

**Step 5.**  
Punch Hole(s) for Conduit


**Step 6.**  
Hang Battery Cabinet on Bracket and Fasten

**Step 7.**  
Verify Components are Top-Aligned

**Step 8.**  
Mount Battery Modules in Cabinet

\*This quick start guide is intended to be used as a supplement to the PWRcell 2 Installation manuals. Reference manuals for complete installation instructions.


### Step 1: Survey Minimum Clearances and Determine Layout

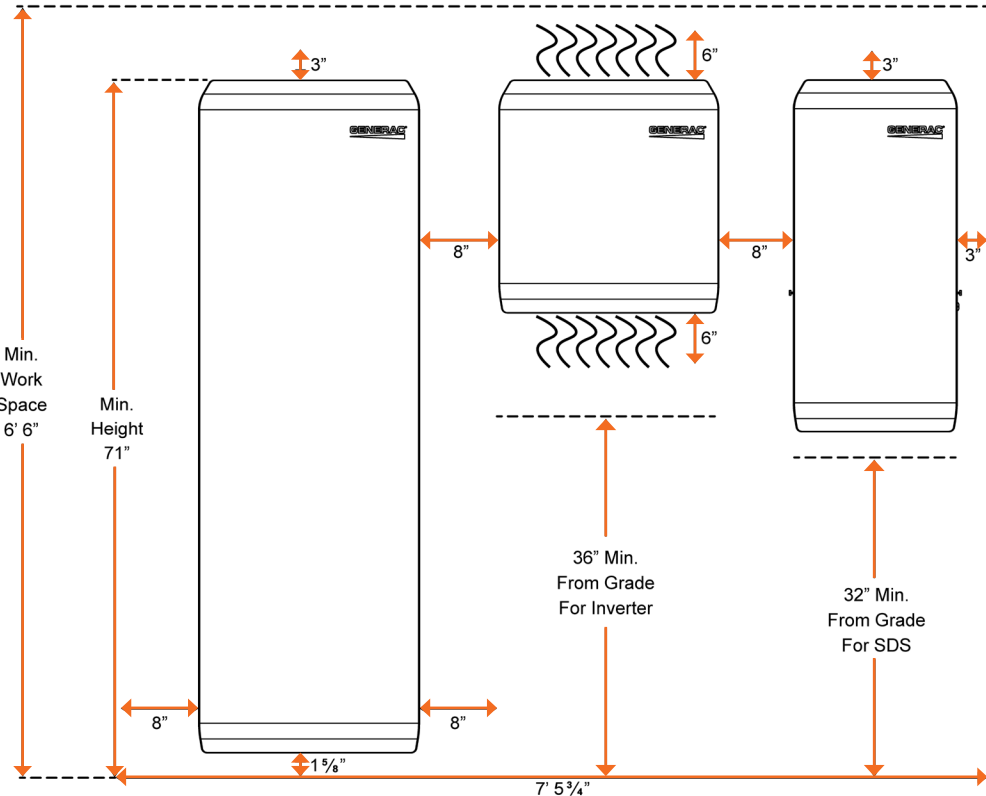


### Step 2: Establish Top Line

To top-align enclosures, **start with the battery cabinet.**

Use the full-scale battery cabinet template from the interior of the box for placement on the wall.

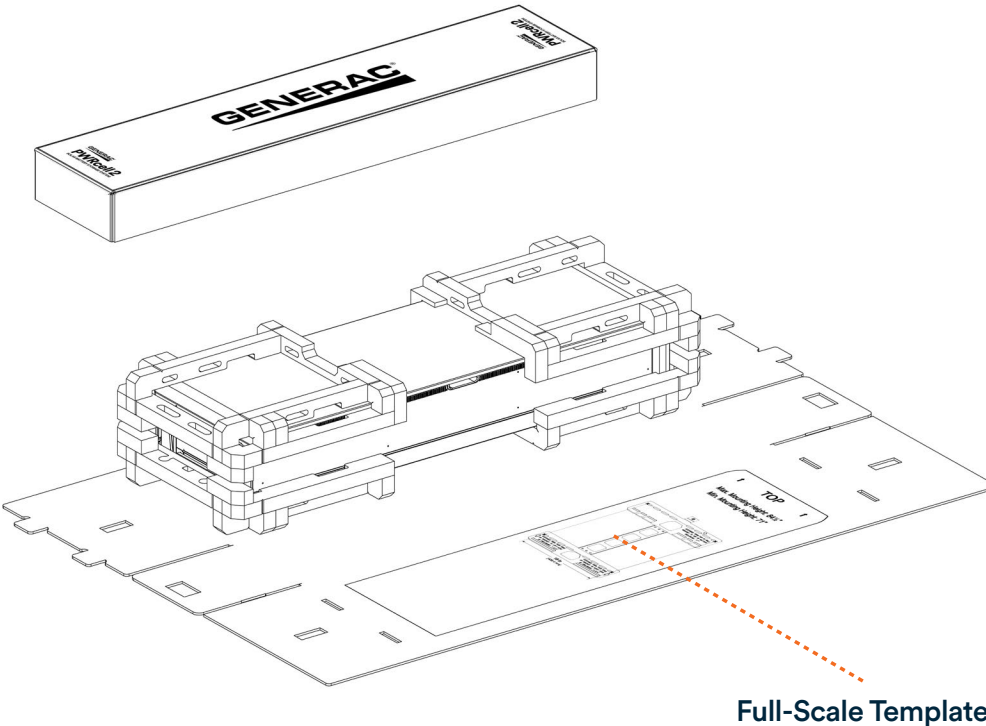


### Step 2: Establish Top Line Max. Mounting Height

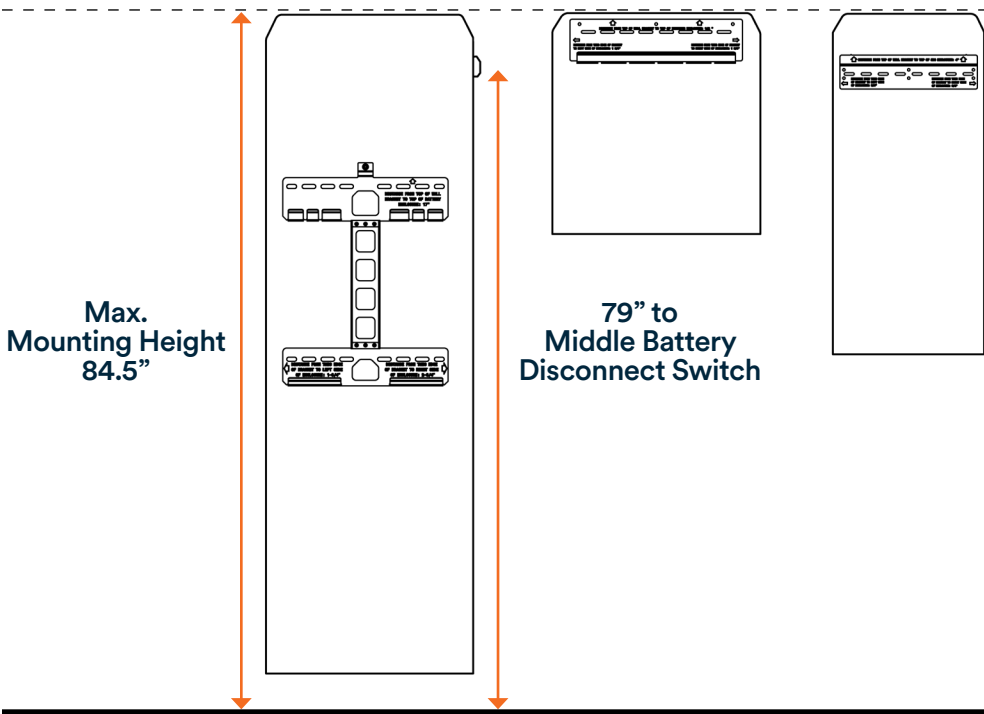


### Step 3: Measure from Top Line to Top of Battery Cabinet Bracket

**NOTE:** All three brackets will be at different heights upon completion.

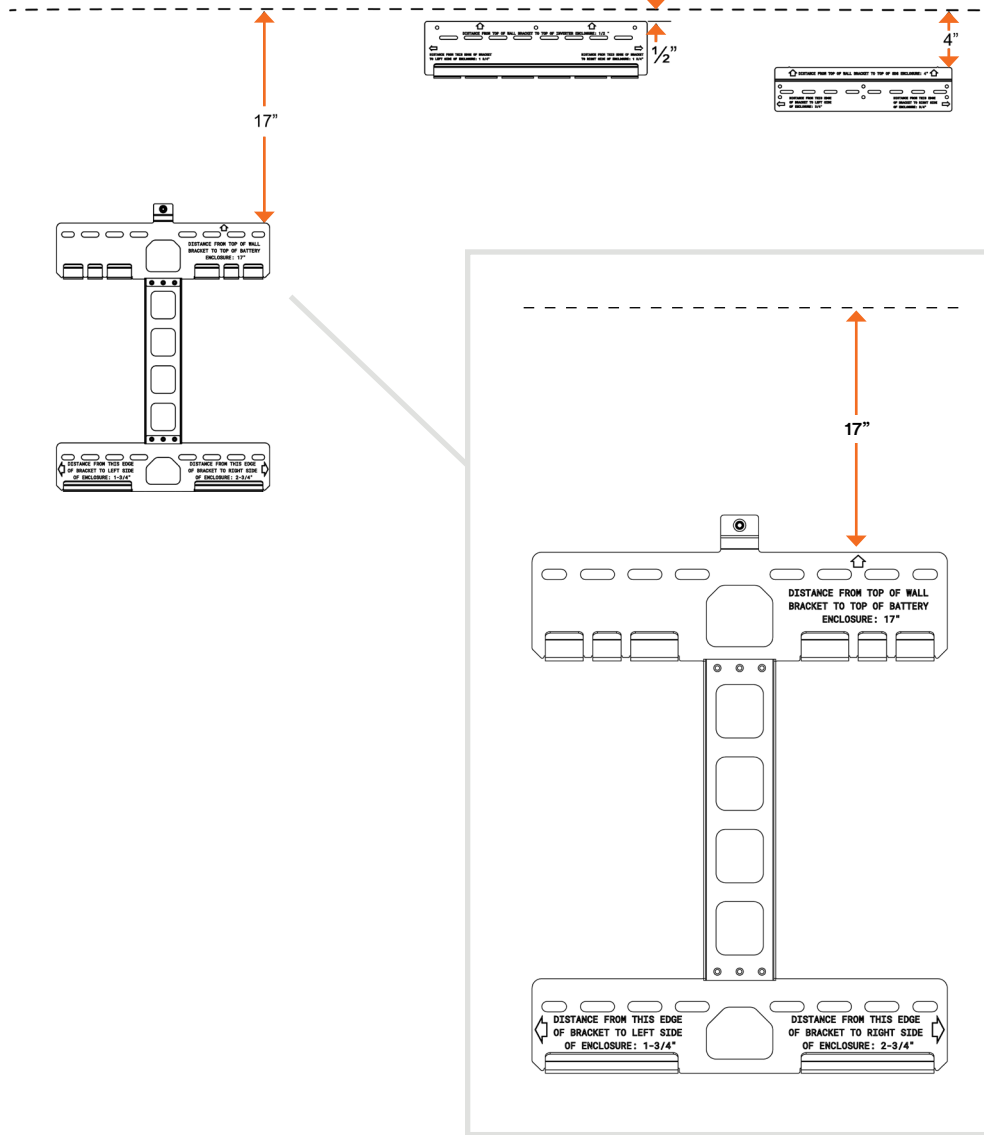


Step 4: Mark Holes, Pre-Drill and Fasten Bracket to Wall


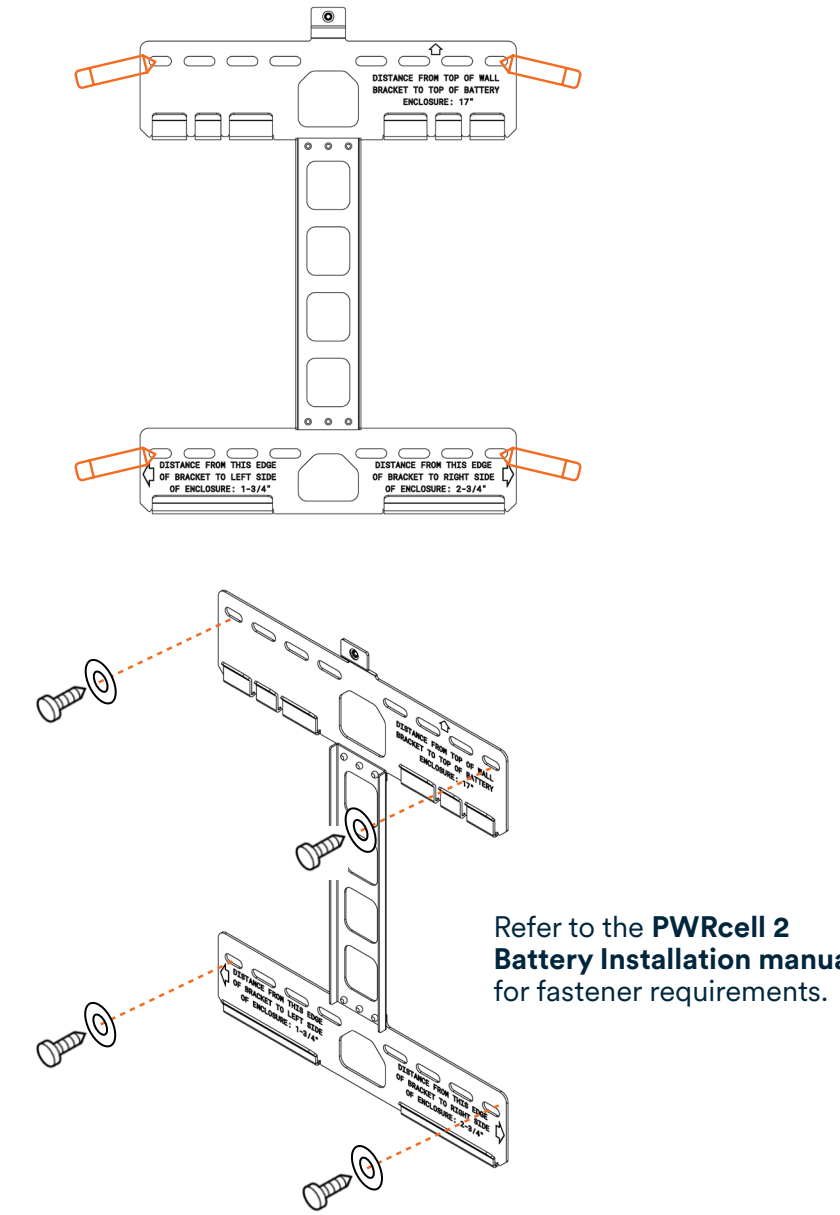


Step 5: Punch Hole(s) for Conduit


All components have dimples on the enclosures to install conduit at the same height.

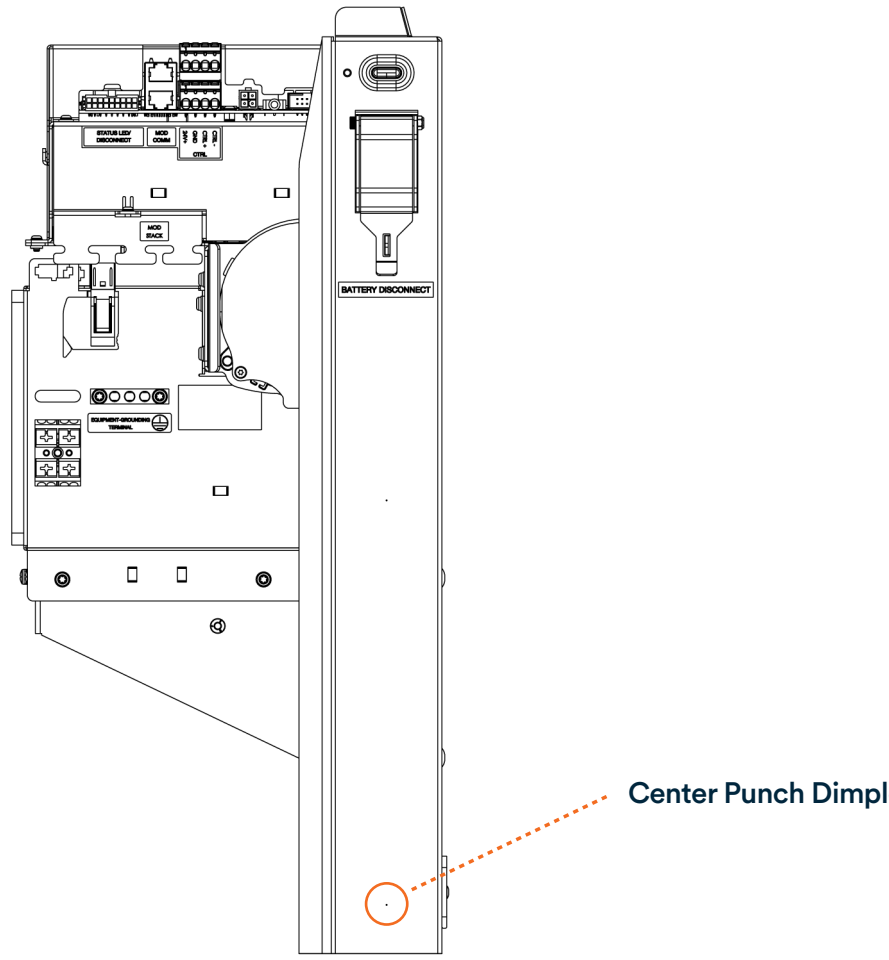

Step 6: Hang Battery Cabinet on Bracket and Fasten

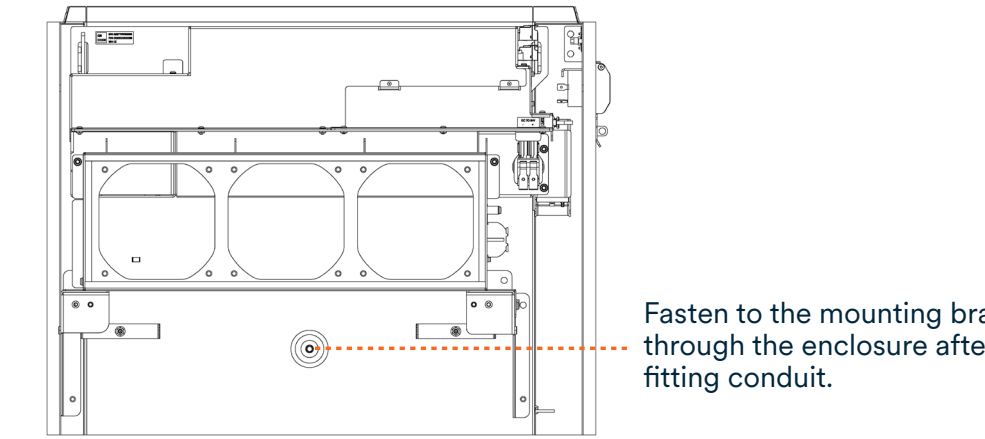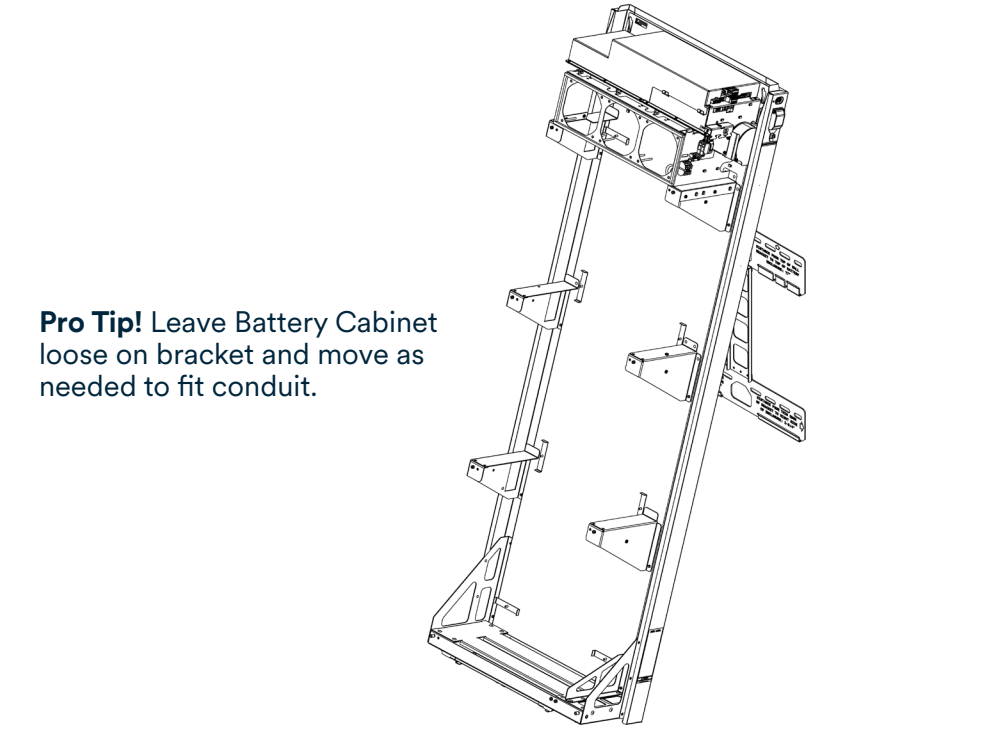


Step 7: Verify Components are Top Aligned

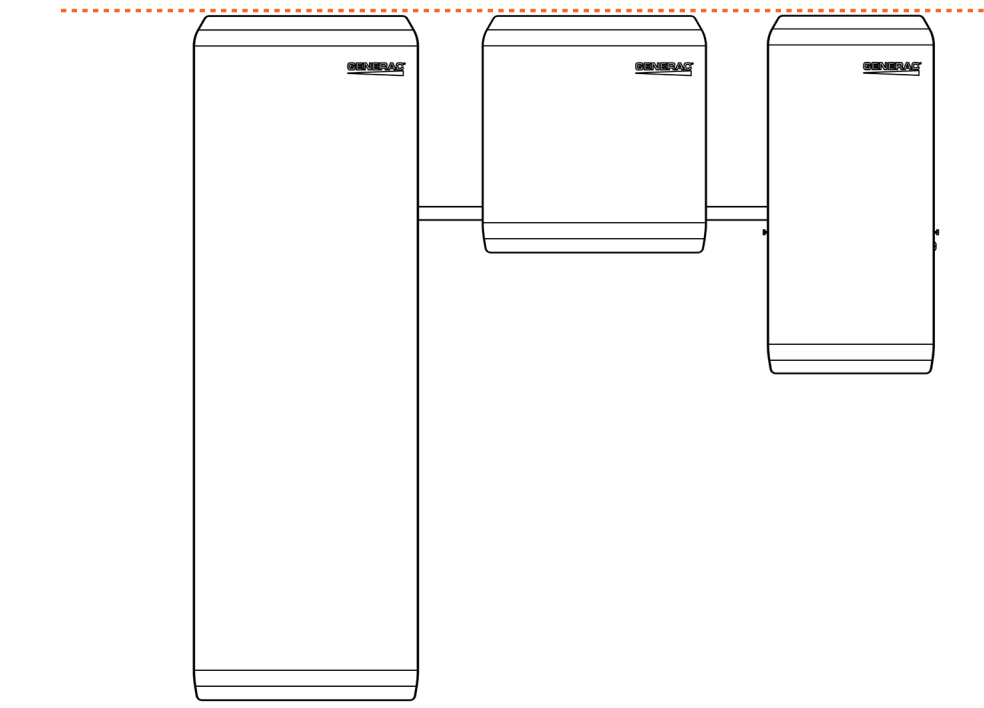


Step 8: Mount Battery Modules in Cabinet

Important! Load back battery modules first, and secure with clips before installing front modules.

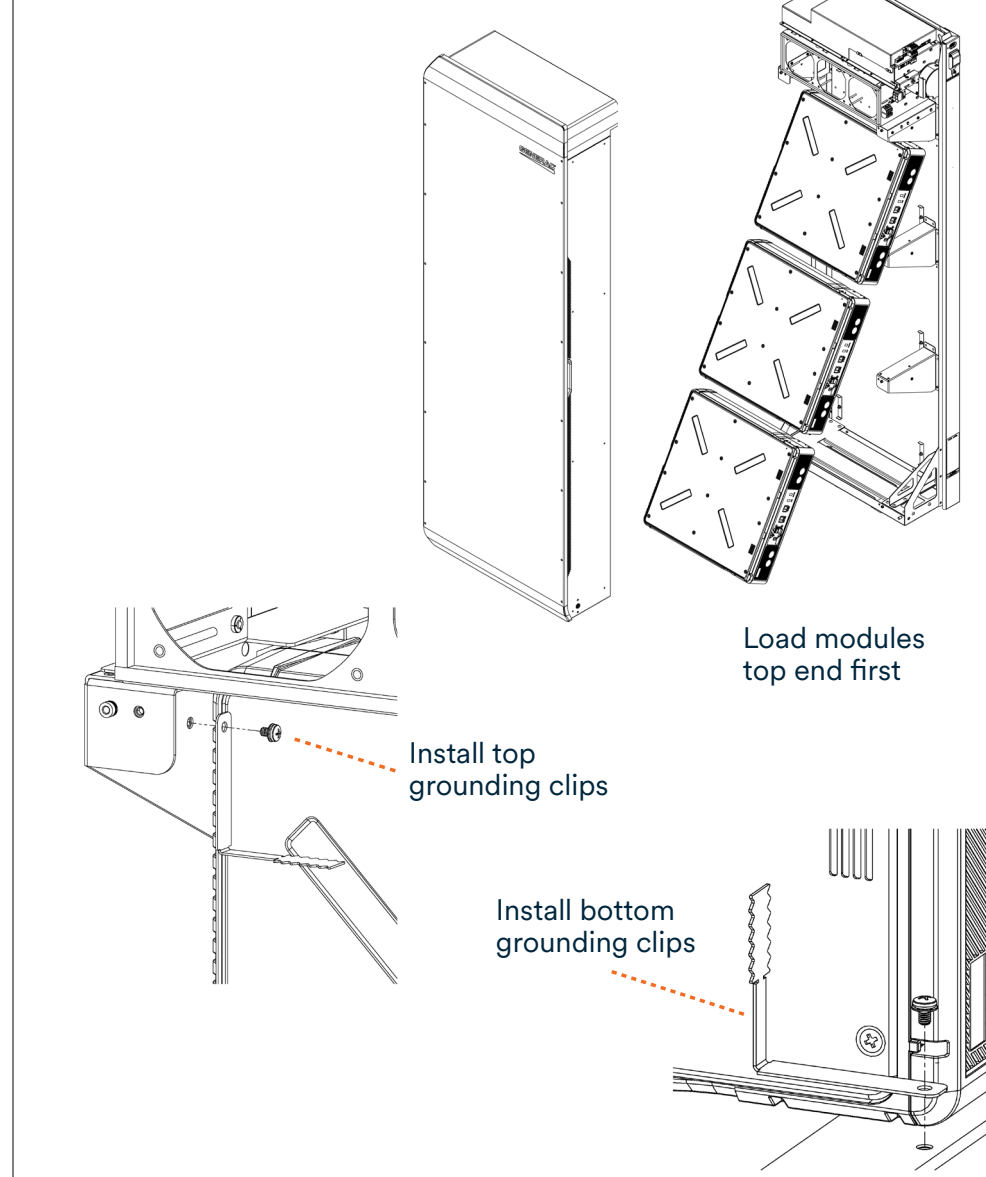

Step 8: Mount Battery Modules in Cabinet Cont.

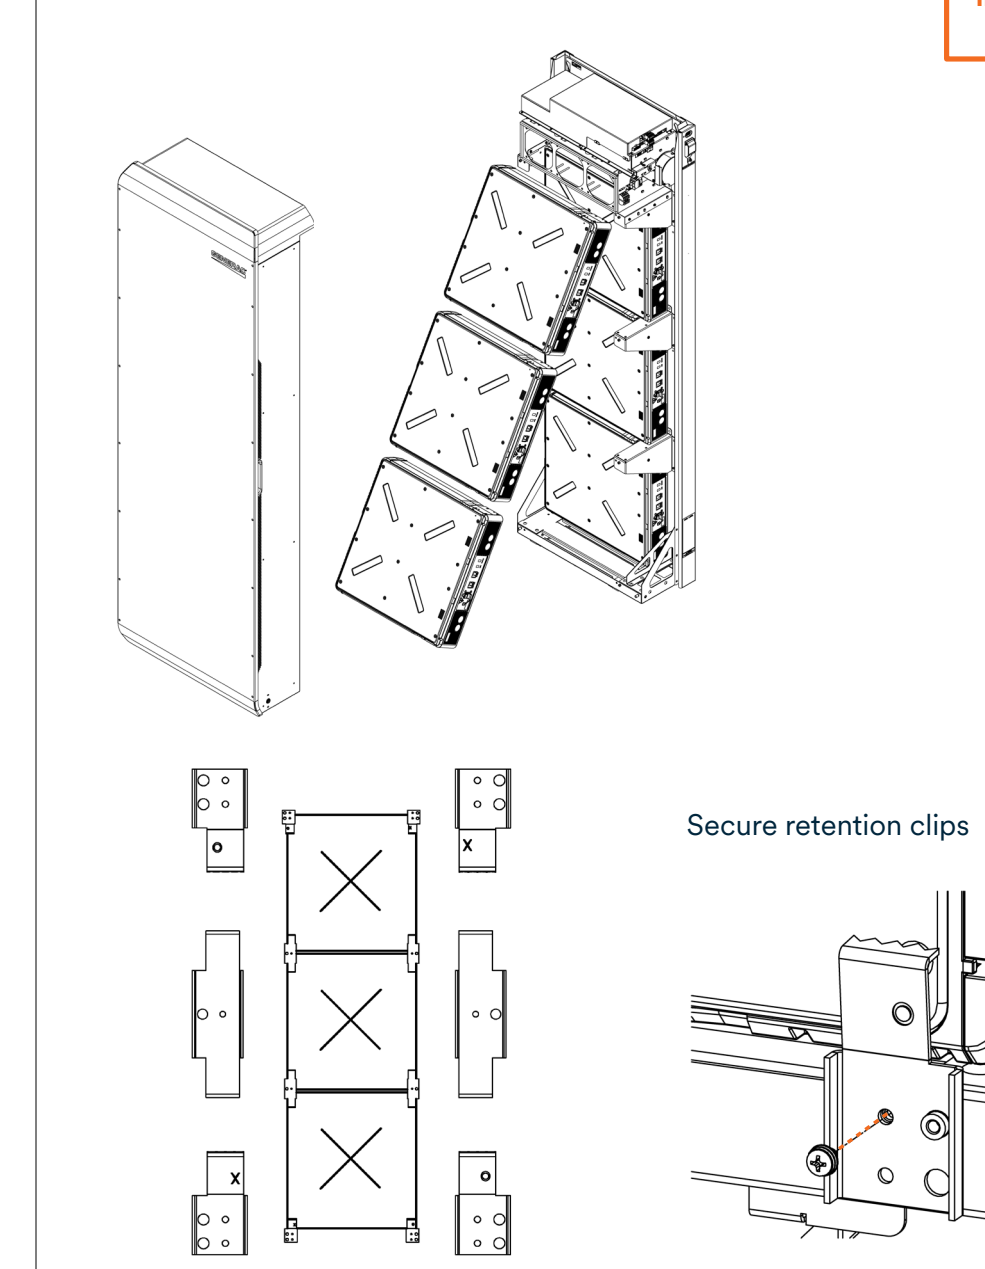

Further Support

If there are questions on any step in this document, please consult the full PWRcell 2 Installation Manuals.

If there are still questions, contact Generac PWRcell Technical Support at 1-855-635-5186 or visit [www.generac.com](http://www.generac.com) for assistance.