

GENERAC

PWRcell2
HOME ENERGY STORAGE SYSTEM

Mounting Guide: Inverter




Tools & Fasteners Required




Tape Measure




Knockout Punch

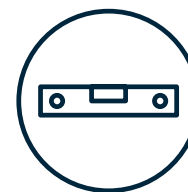


Level

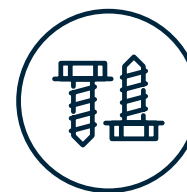

Flanged Fasteners

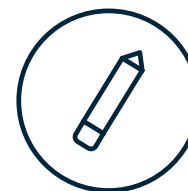

Pencil

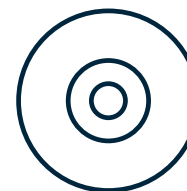

Washers



Drill

Steps to Follow*

Step 1.
Survey Minimum Clearances and
Determine Layout

Step 2.
Establish Top Line

Step 3.
Measure from Top Line to Top of
Inverter Bracket

Step 4.
Mark Holes, Pre-Drill and
Fasten Bracket to Wall


Step 5.
Punch Hole(s) for Conduit

Step 6.
Hang Inverter on Bracket and Fasten

Step 7.
Verify Components are Top-Aligned

*This quick start guide is intended to be used as a supplement to the PWRcell 2 Installation manuals. Reference manuals for complete installation instructions.


Step 1: Survey Minimum Clearances and Determine Layout

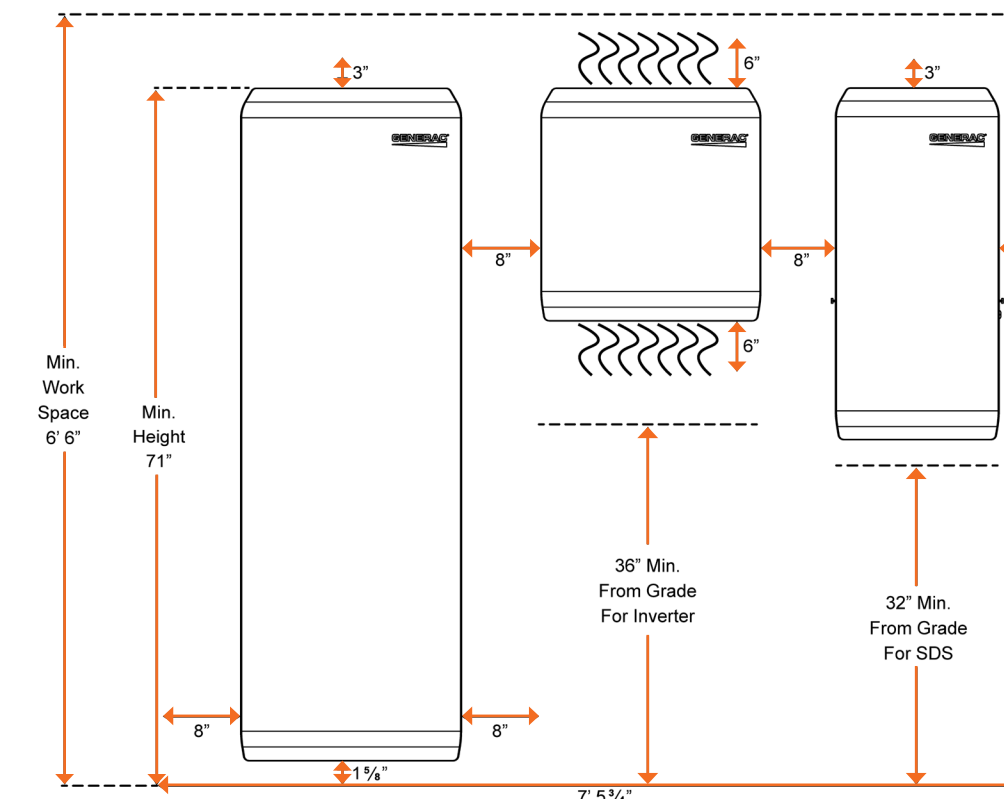


Step 2: Establish Top Line

To top-align enclosures, **start with the battery cabinet.**

Use the full-scale battery cabinet template from the interior of the box for placement on the wall.

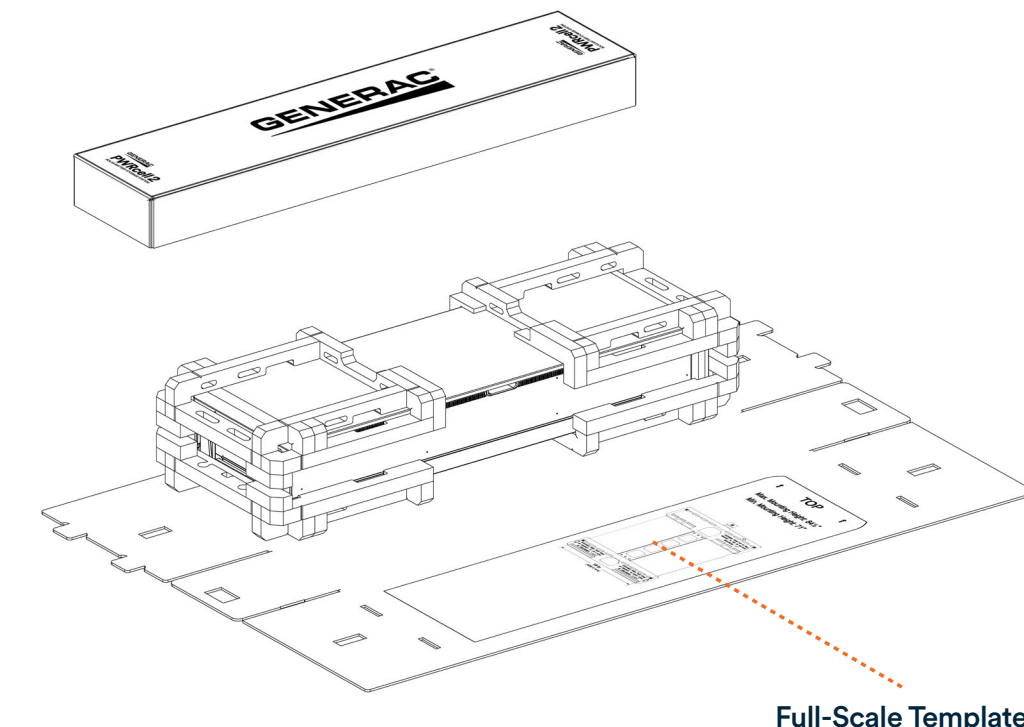


Step 2: Establish Top Line Max. Mounting Height

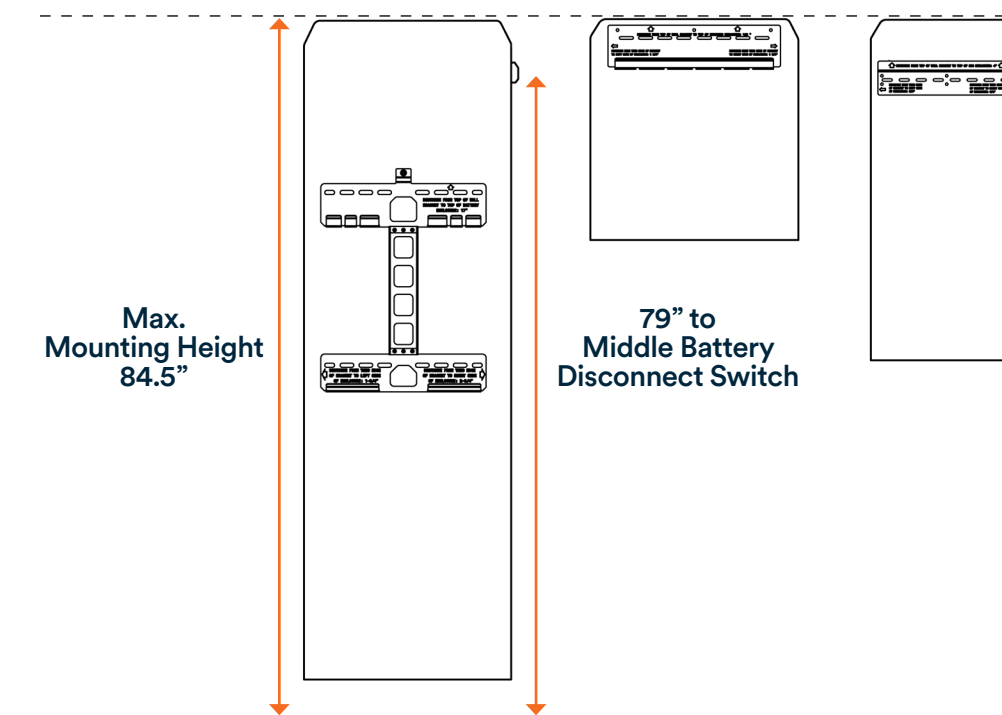


Step 3: Measure from Top Line to Top of Inverter Bracket

NOTE: All three brackets will be at different heights upon completion.

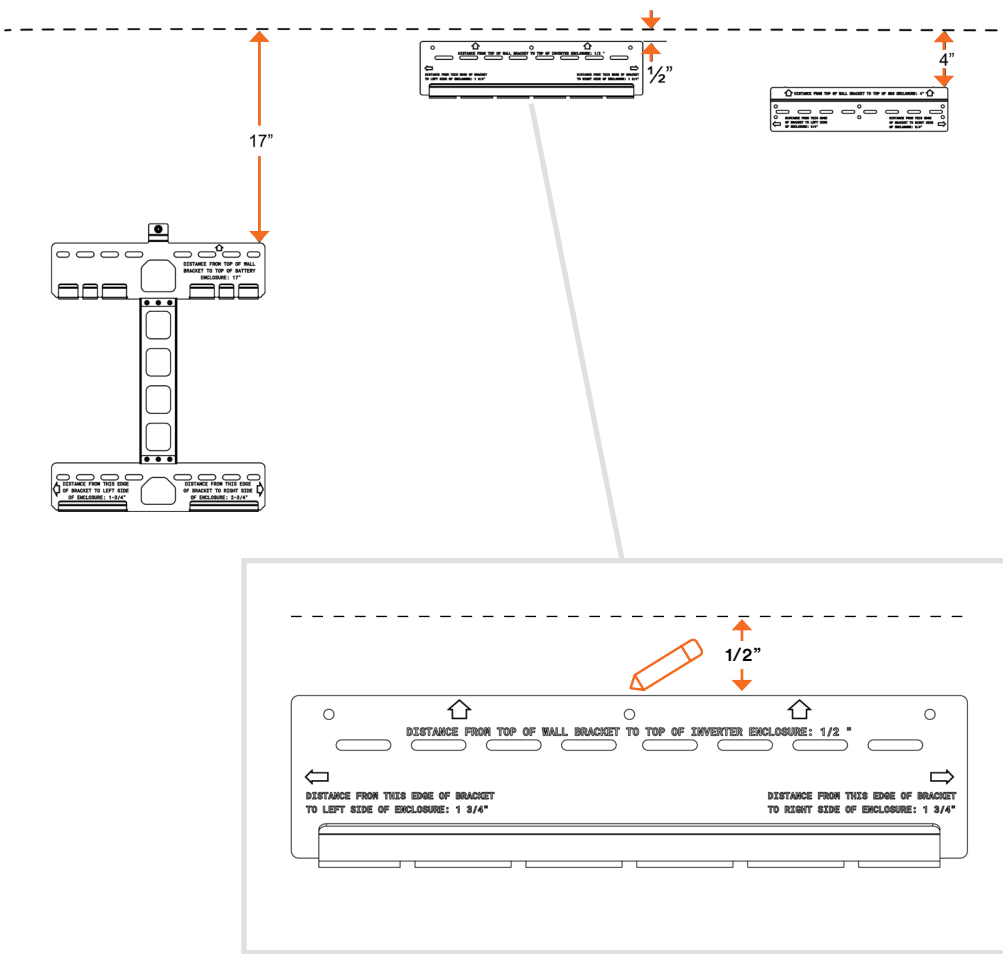


Step 4: Mark Holes, Pre-Drill and Fasten Bracket to Wall

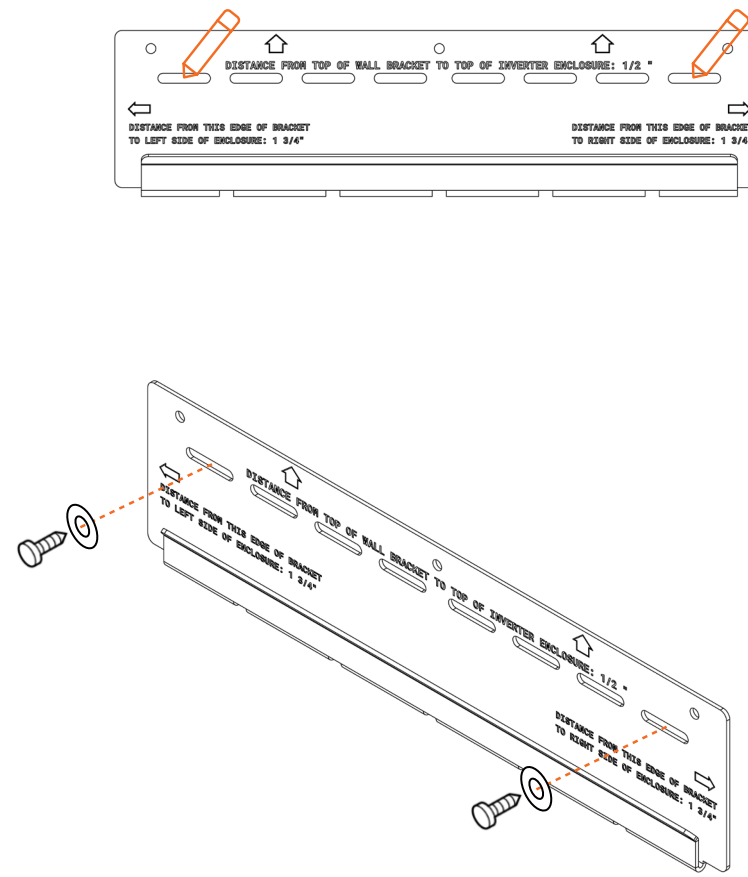

Refer to the **PWRcell 2 Battery Installation manual** for fastener requirements.



Step 5: Punch Hole(s) for Conduit

All components have dimples on the enclosures to install conduit at the same height.

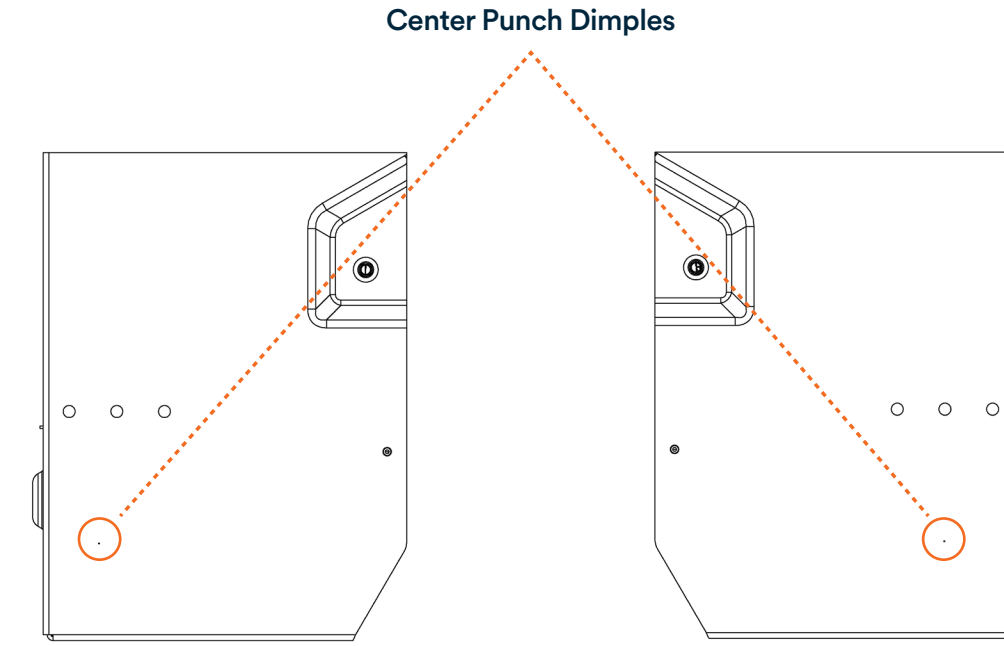


Step 6: Hang Inverter on Bracket and Fasten Through Enclosure

Pro Tip! Leave Battery Cabinet loose on bracket and move as needed to fit conduit.

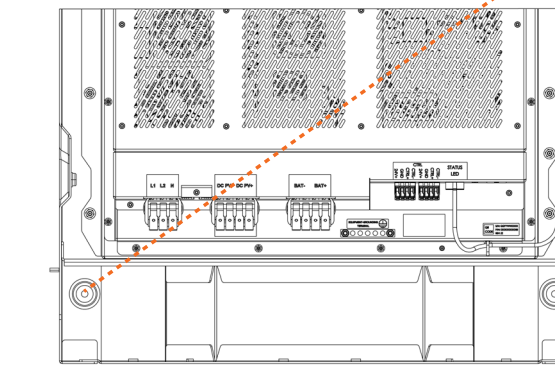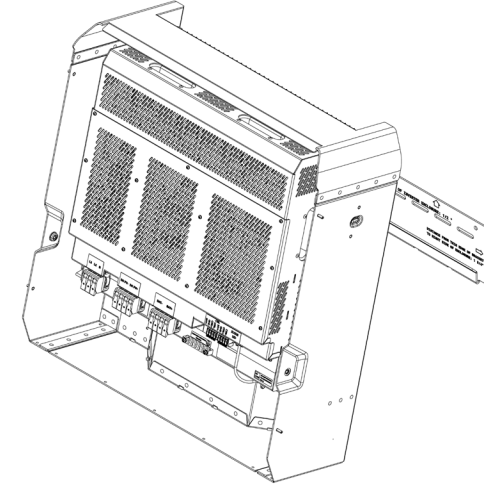

Note: Depending on the mounting surface, it may be necessary to hang inverter, mark interior holes, then remove inverter to pre-drill holes.

Step 7: Verify Components are Top Aligned

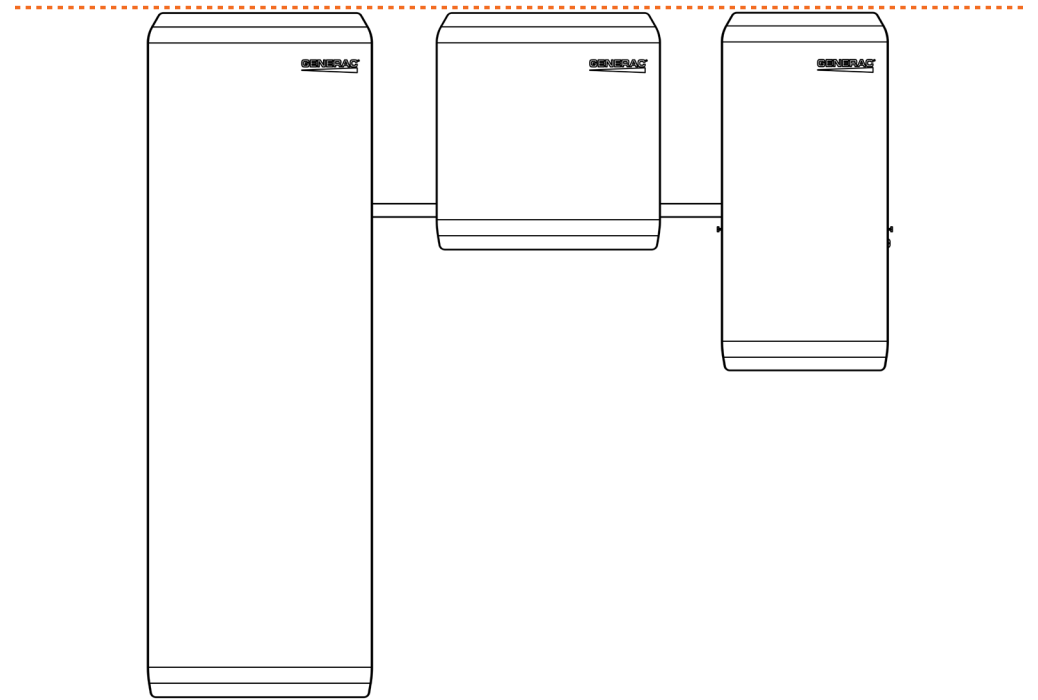

Further Support

If there are questions on any step in this document, please consult the full PWRcell 2 Installation Manuals.

If there are still questions, contact Generac PWRcell Technical Support at 1-855-635-5186 or visit www.generac.com for assistance.



Generac Power Systems, Inc.
S45 W29290 Hwy. 59, Waukesha, WI 53189
www.Generac.com | 888-GENERAC (436-3722)
1025024 | REV 08/2025

©2025 Generac Power Systems. All rights reserved.
Specifications are subject to change without notice.